

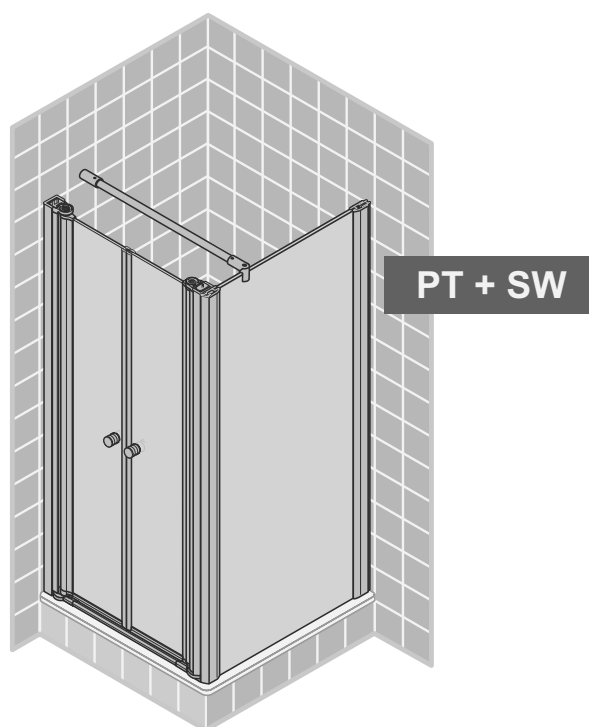
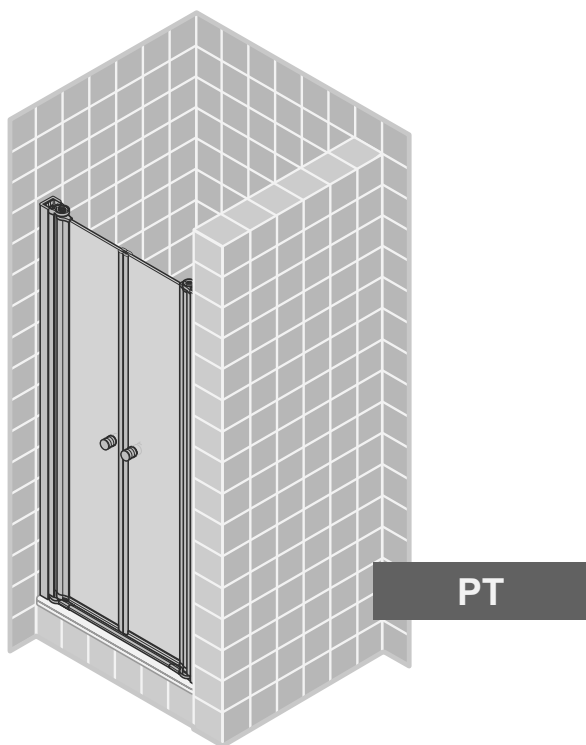
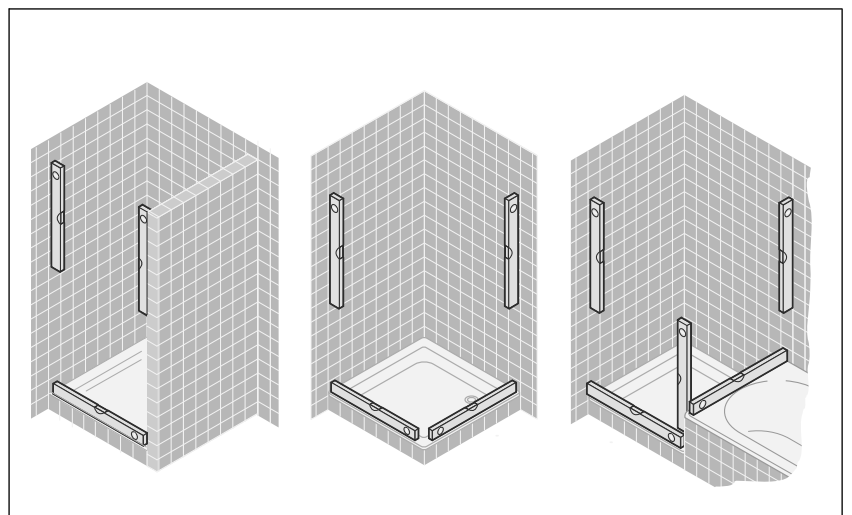
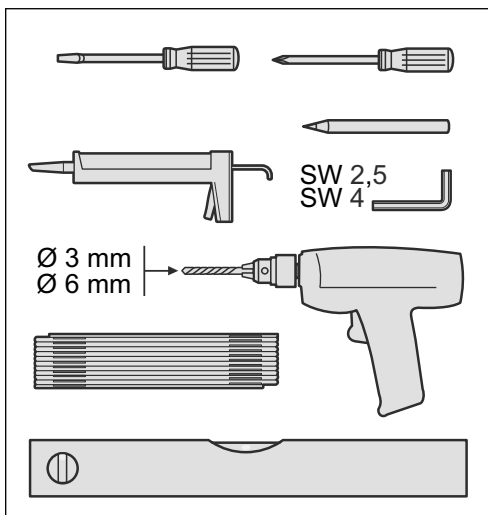




# Montageanleitung Installation instructions Instructions de montage Montagehandleiding





PT 0601/1631  
SW 0603  
BSW 0606

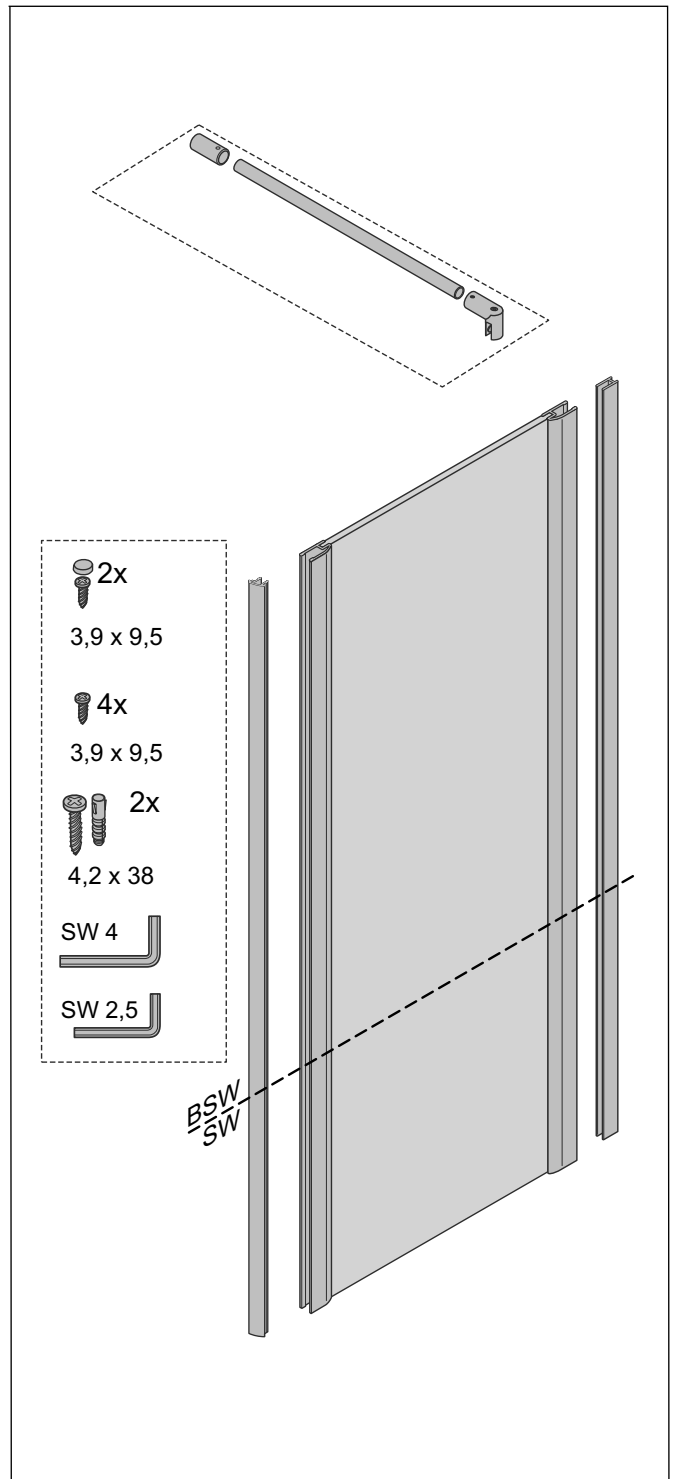

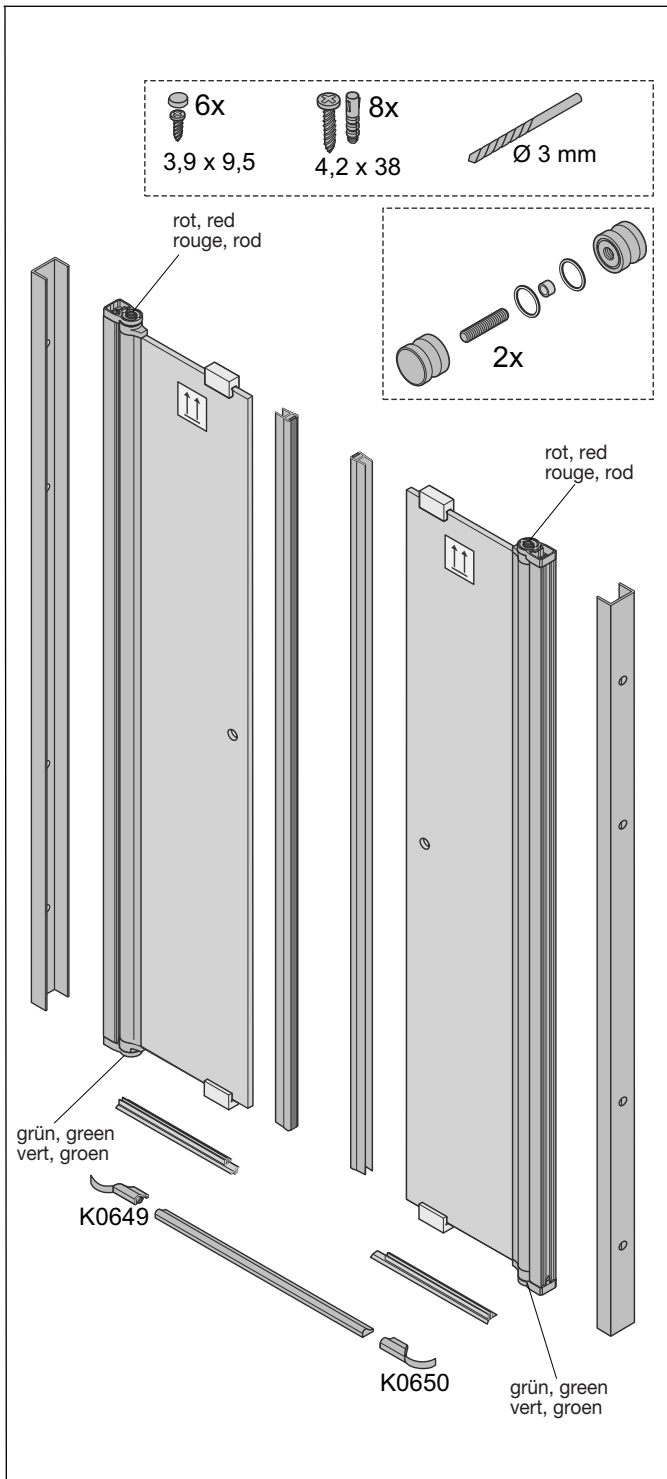


# PT 1631

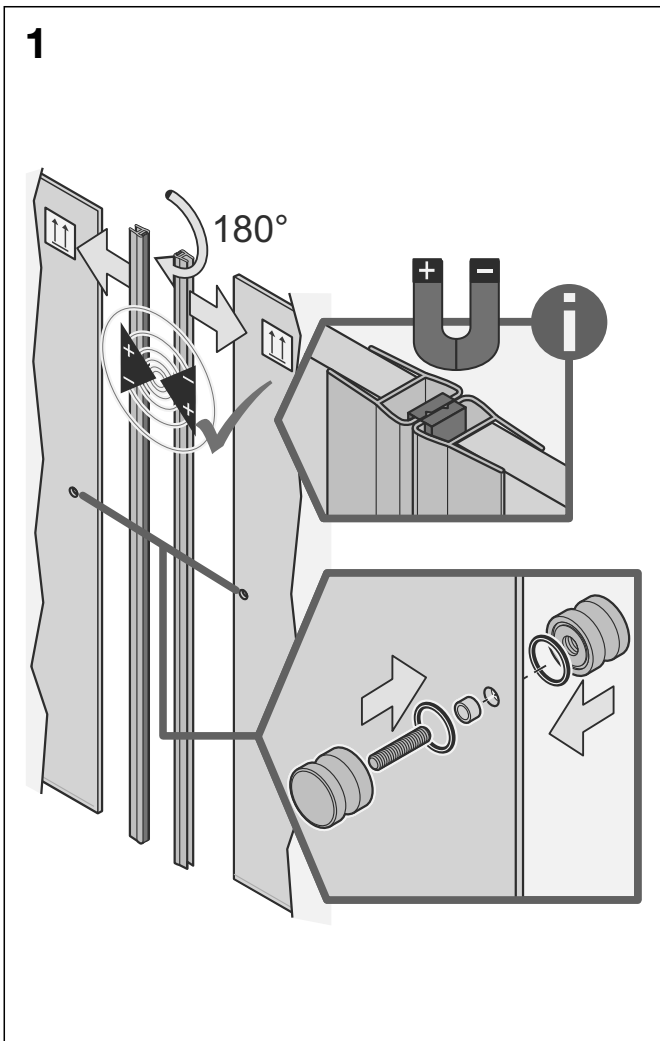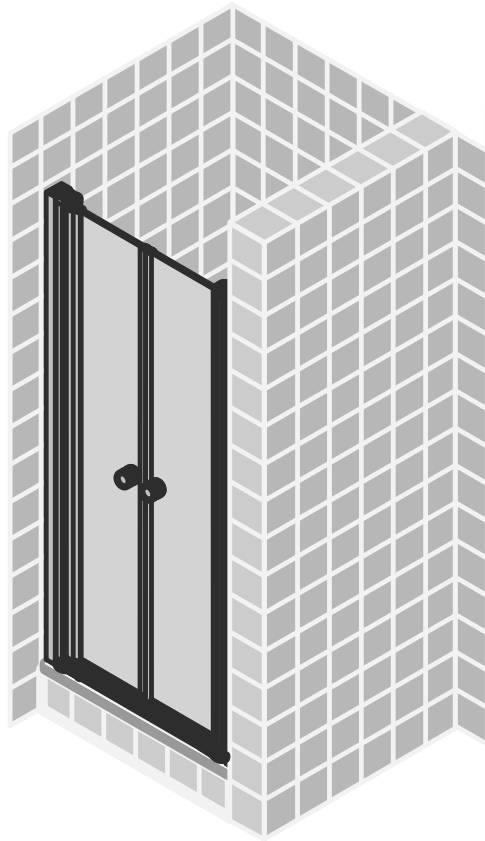


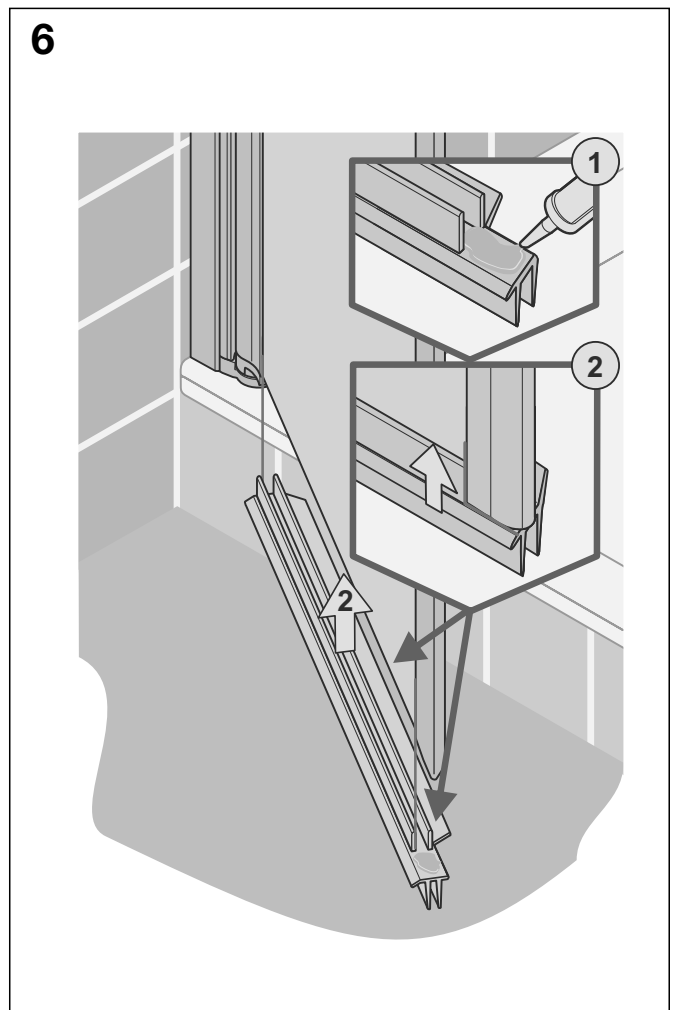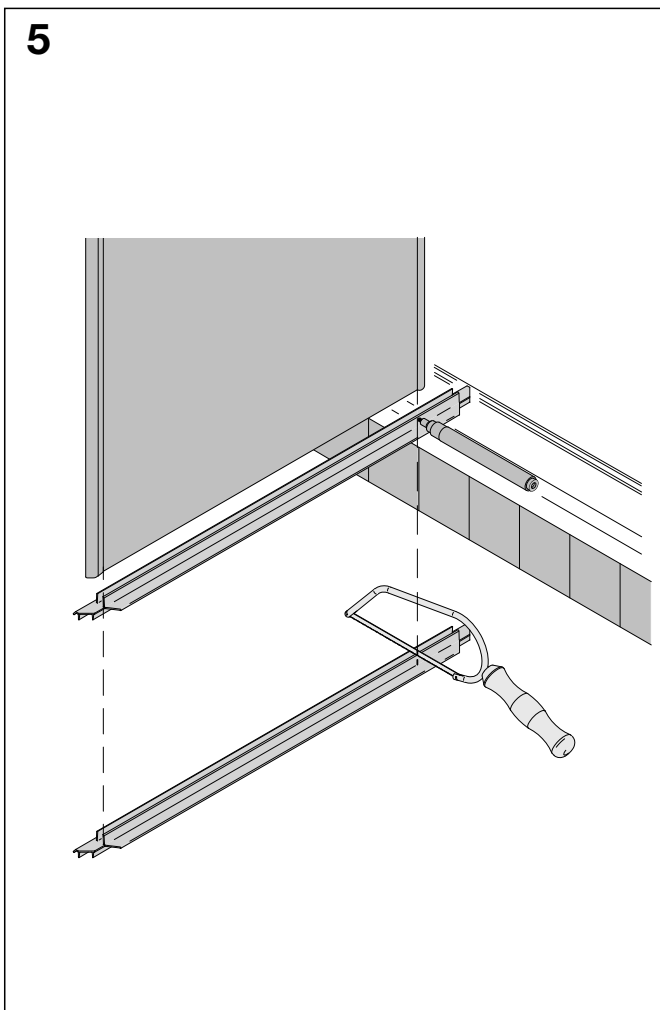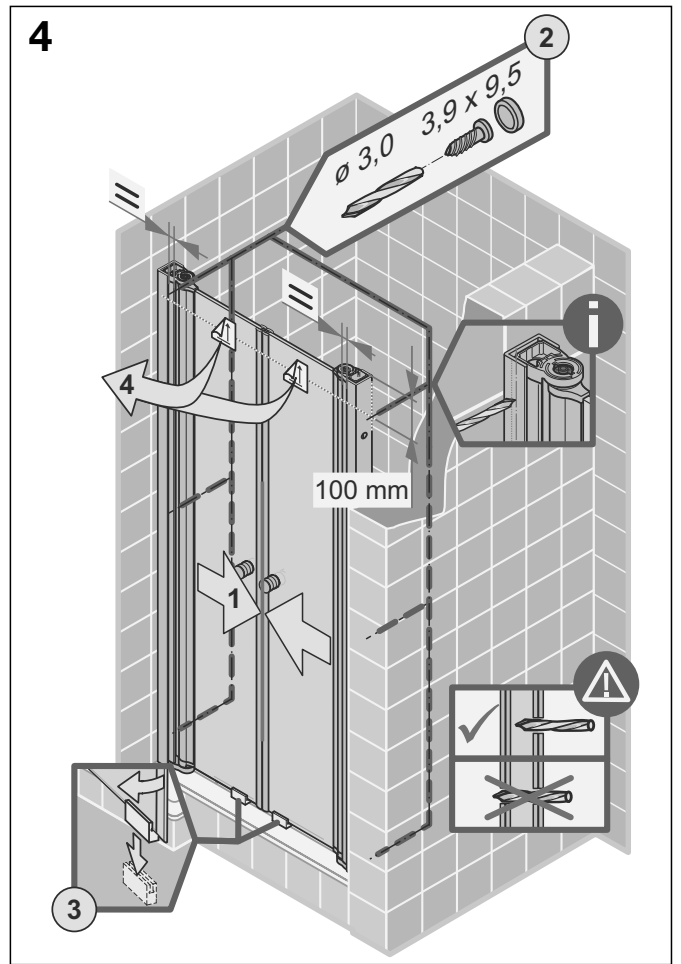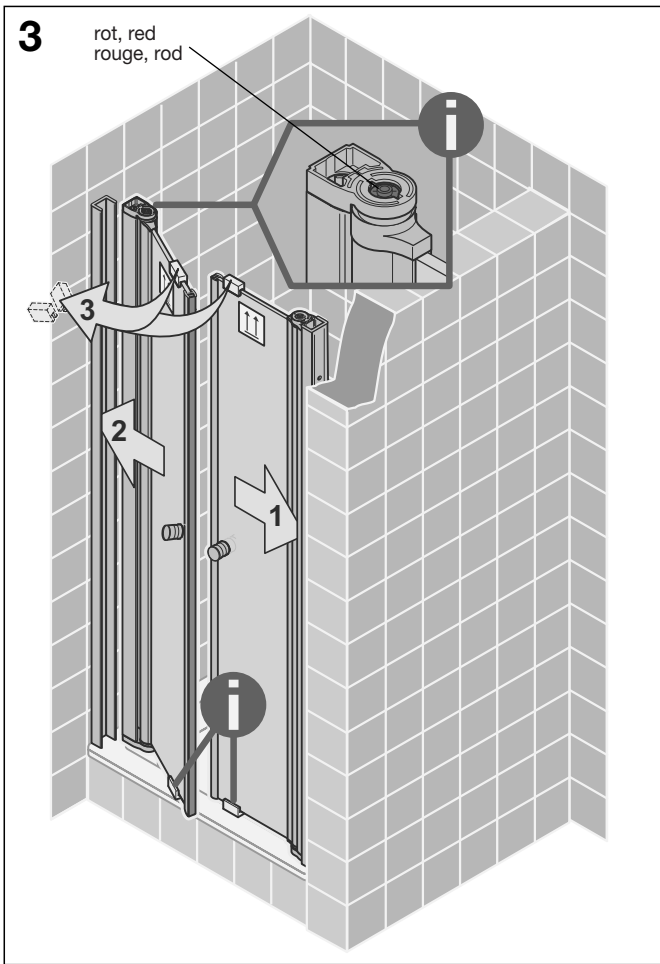



7

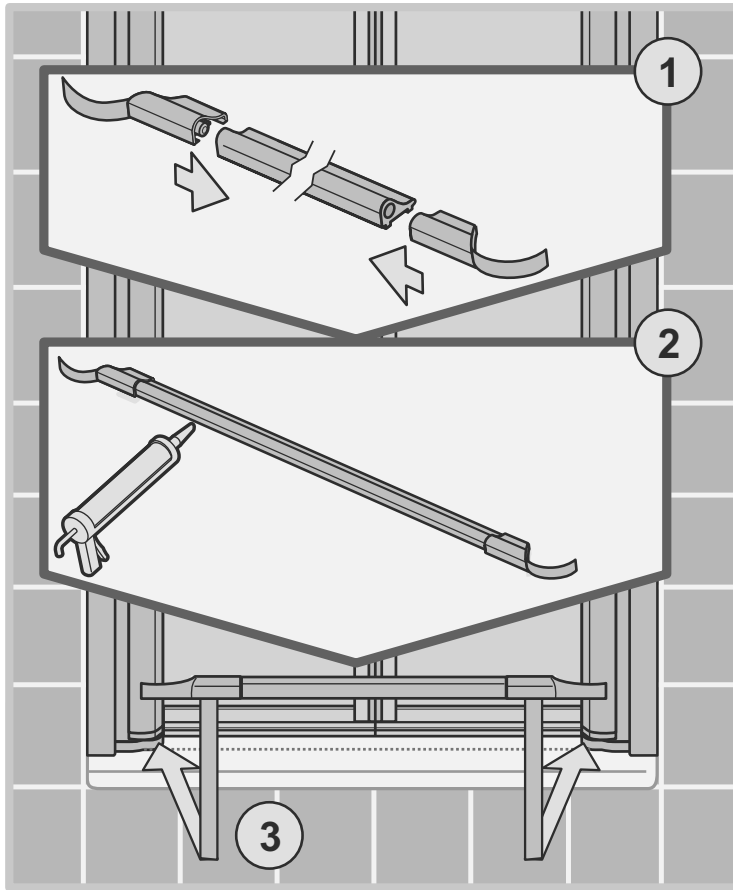

8

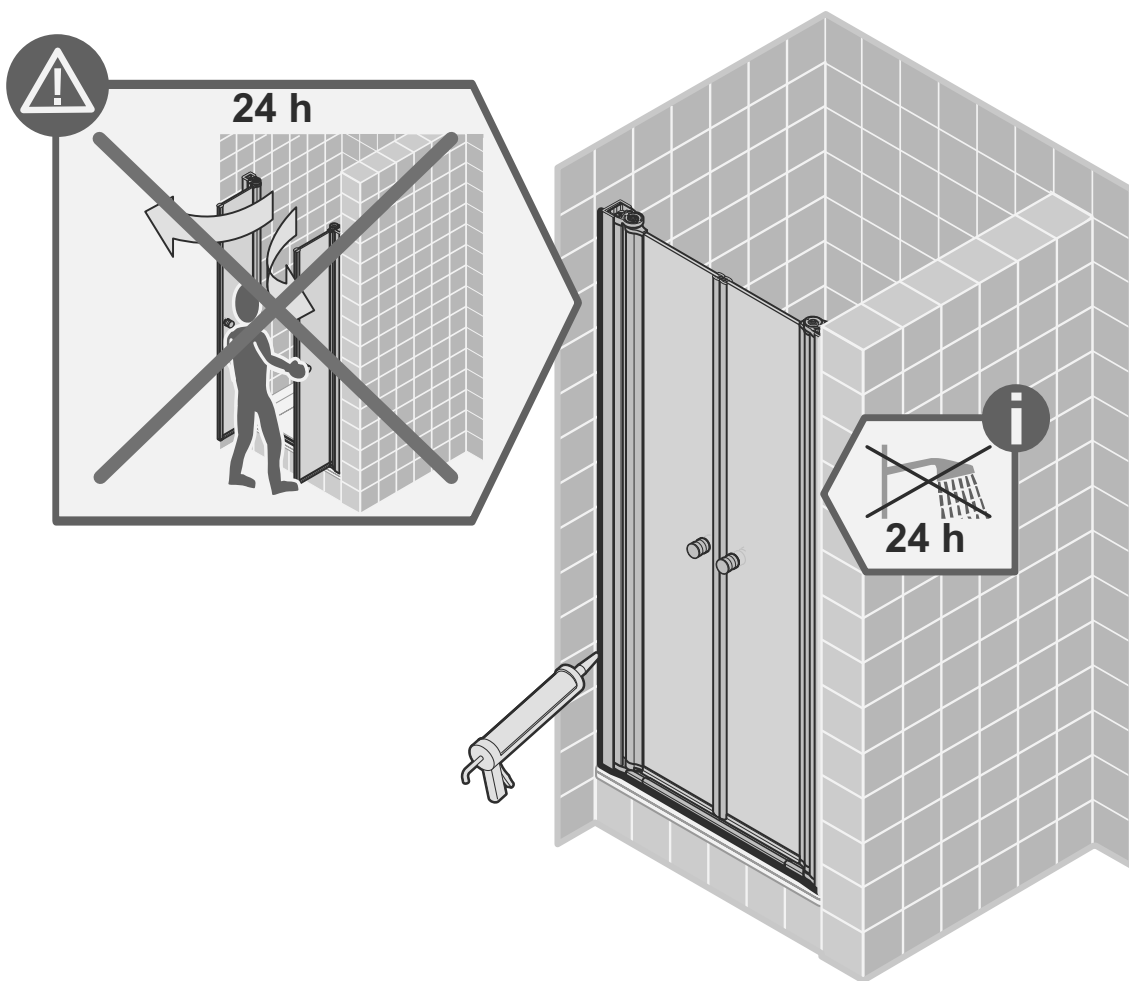



# PT 0601 + SW 0603

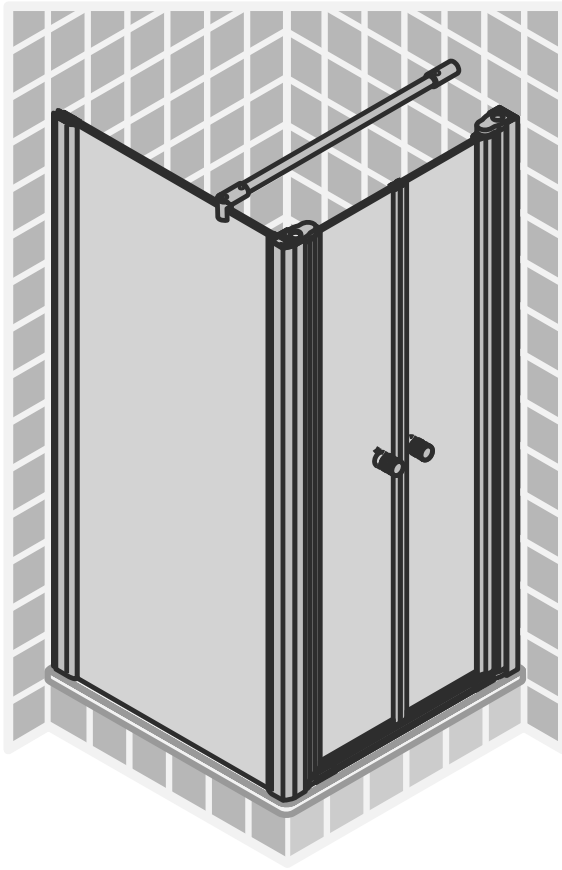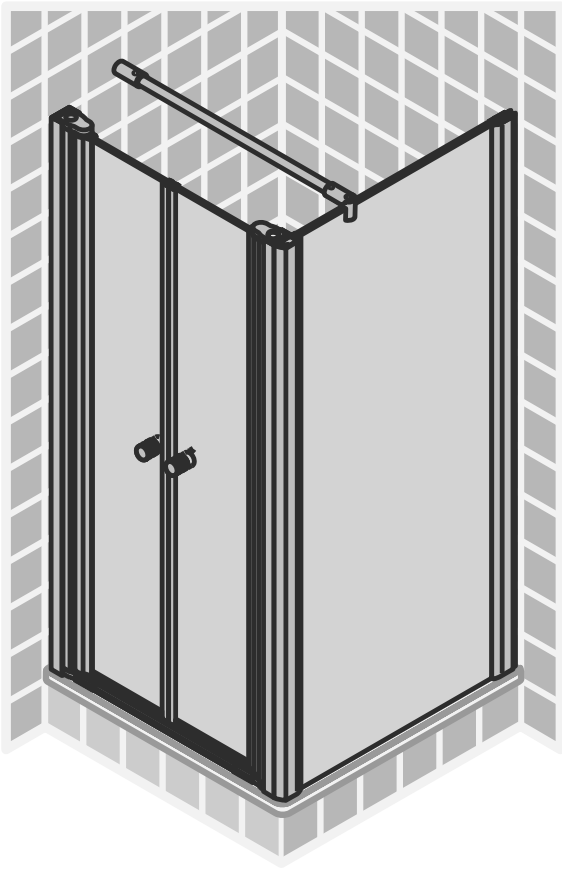


**1**

A	B	C
700	675-695	675-695
750	725-745	725-745
800	775-795	775-795
900	875-895	875-895
1000	975-995	975-995
<b>SOM</b>	A-≥15	A-≥10


2

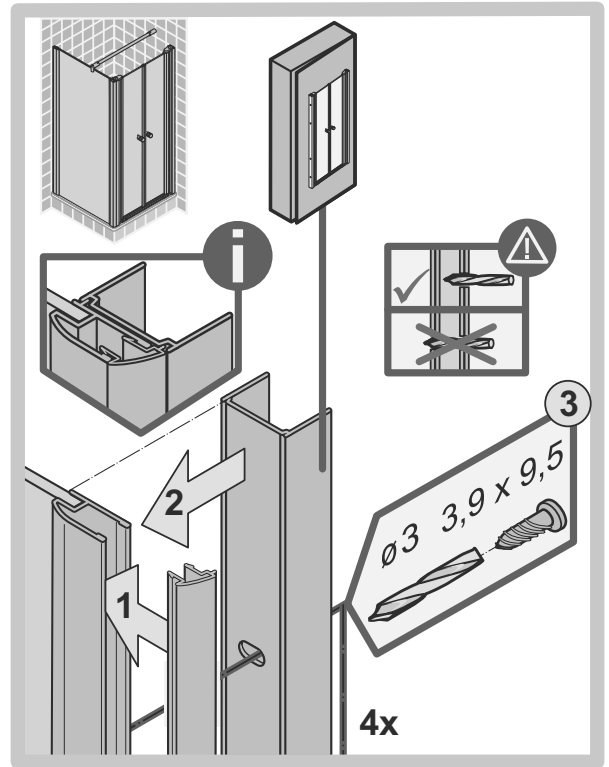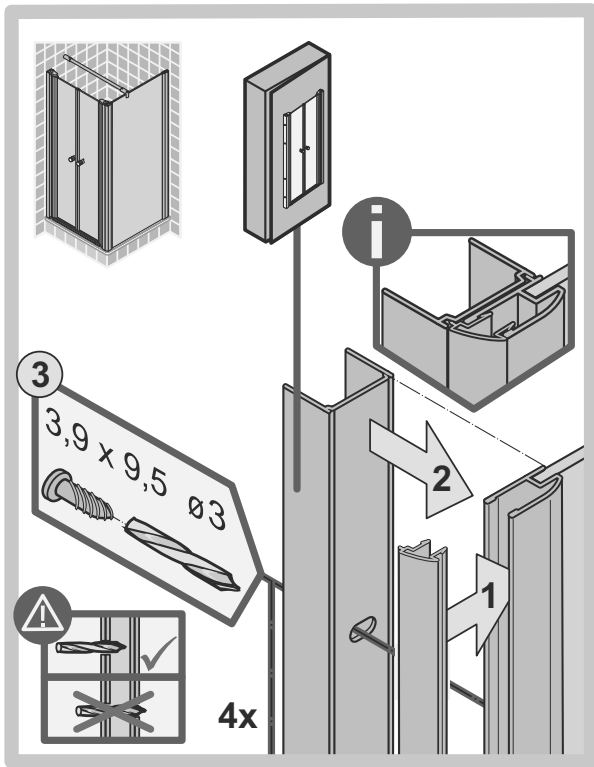








3

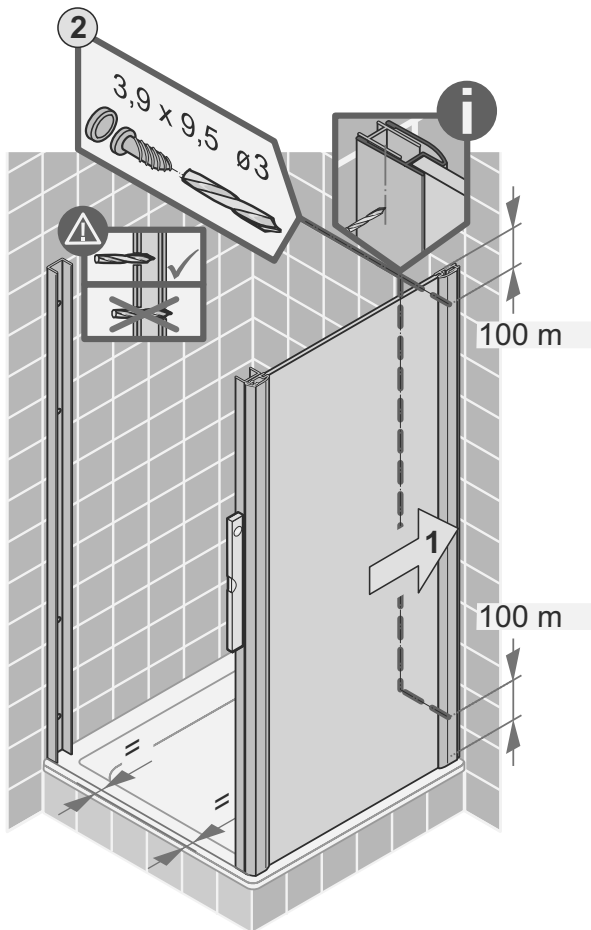


4

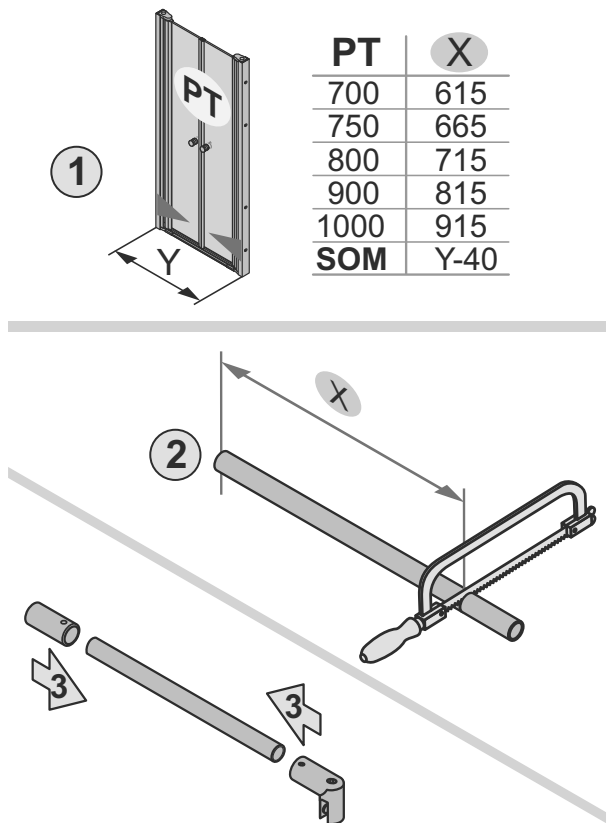


# 5

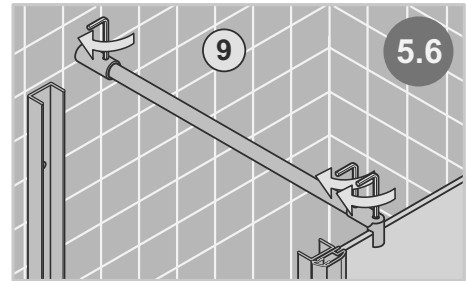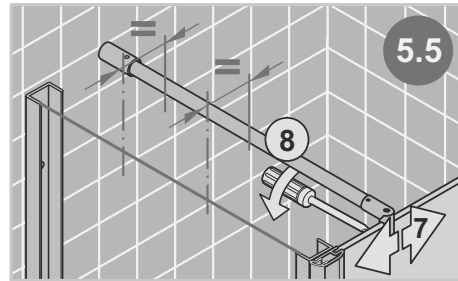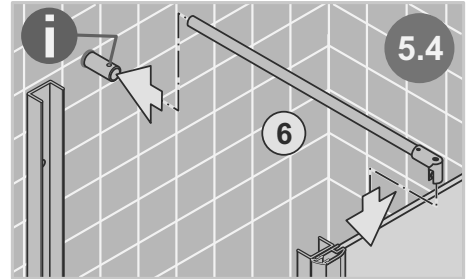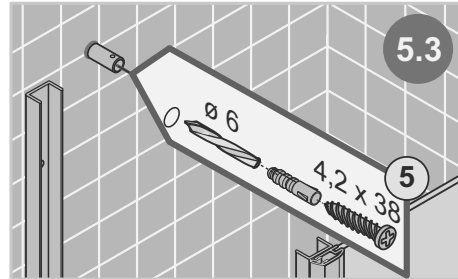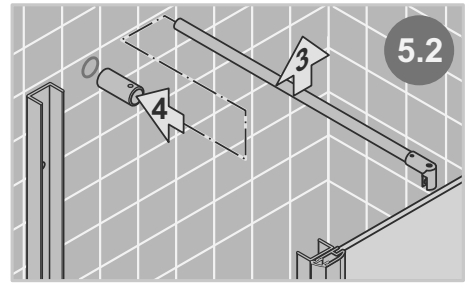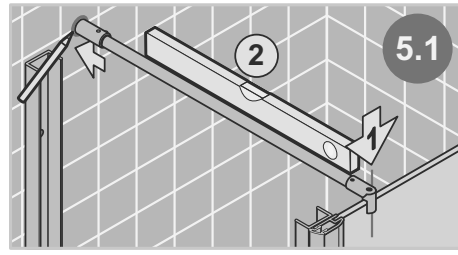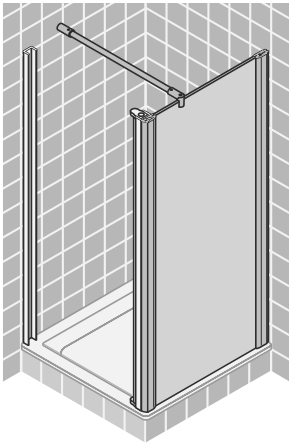





# 6

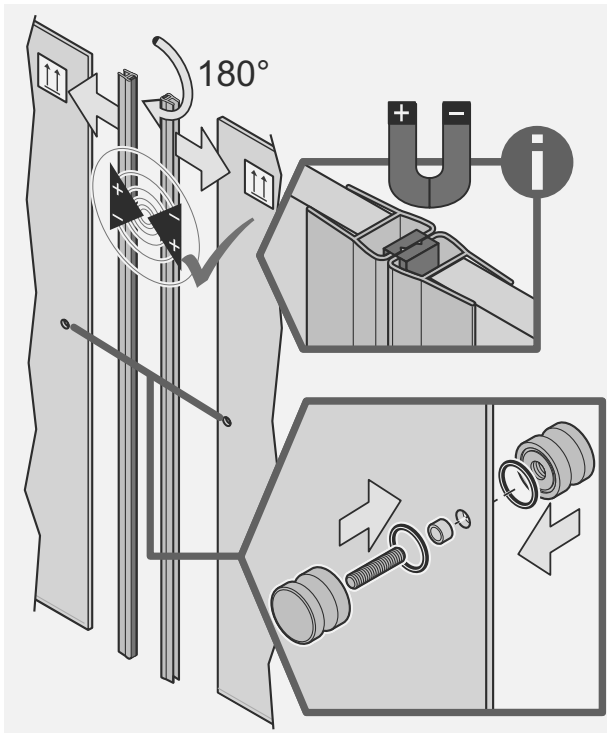


# 7

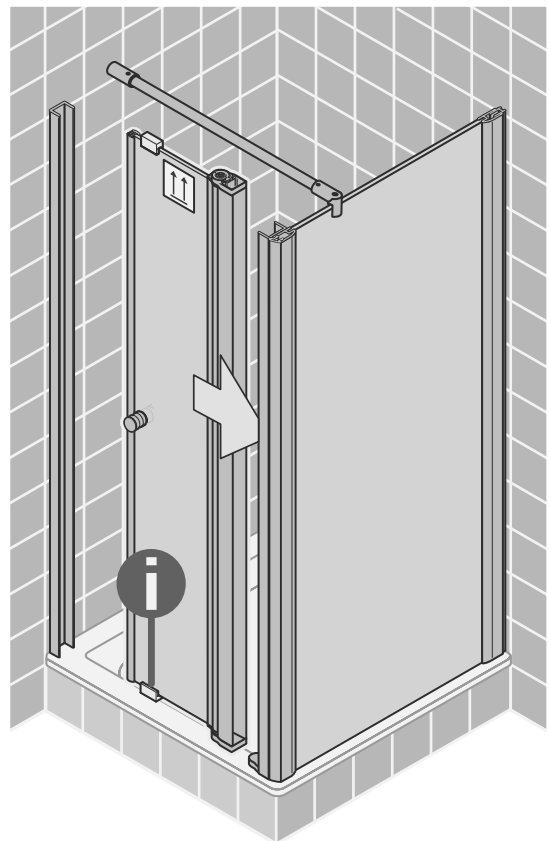




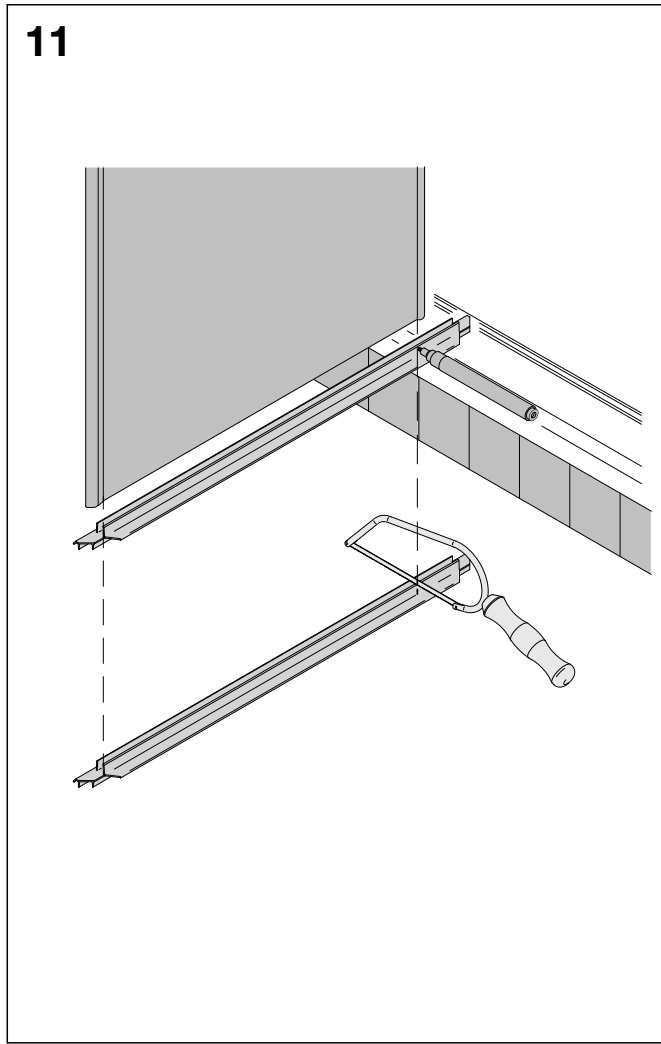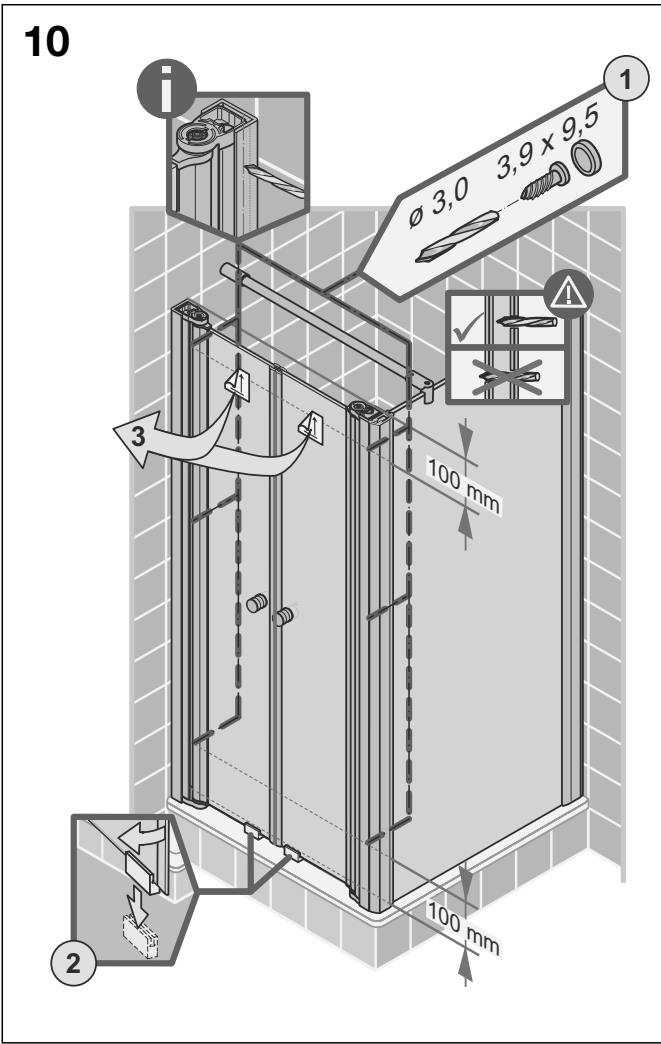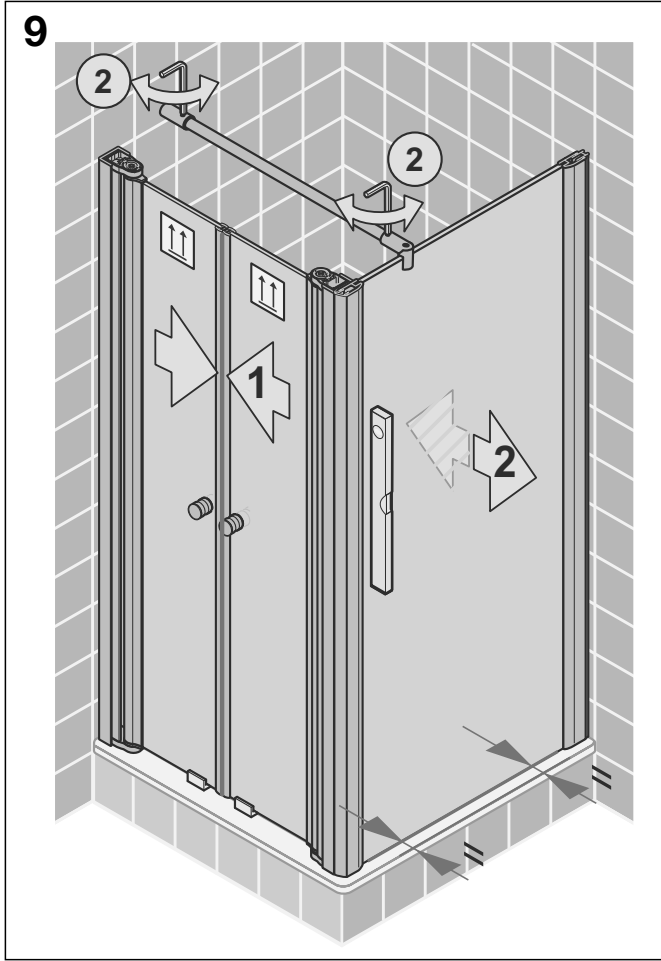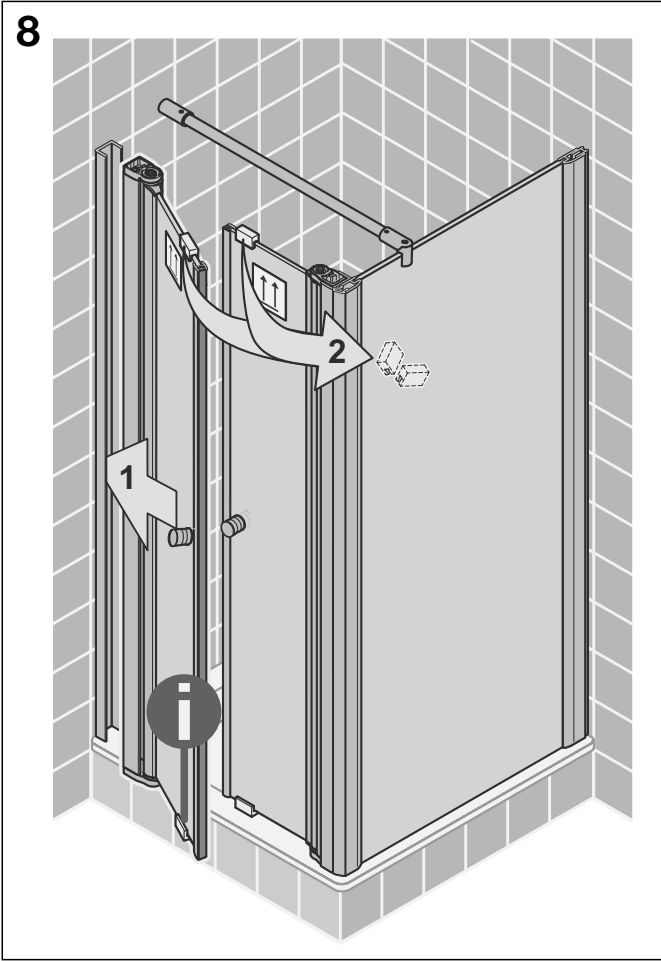



12

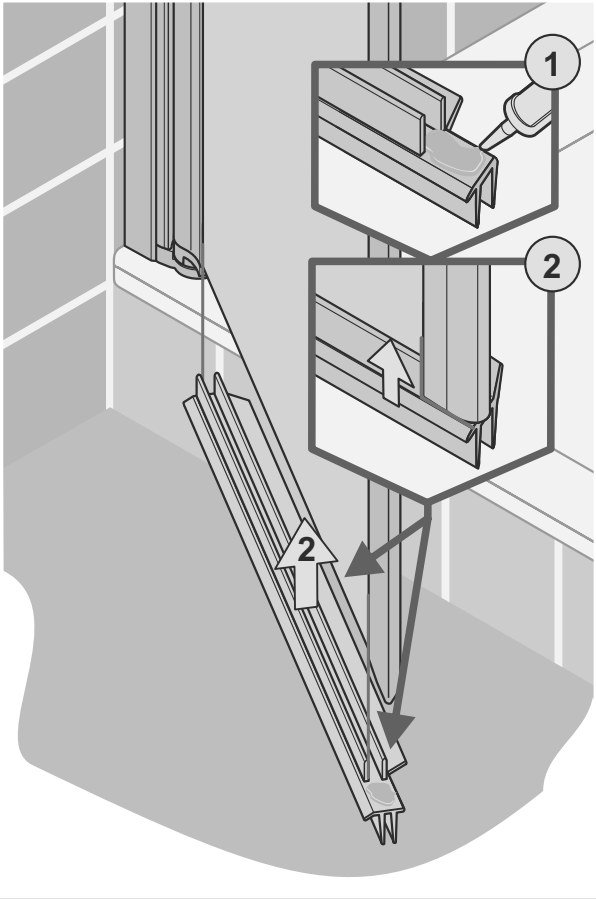


13

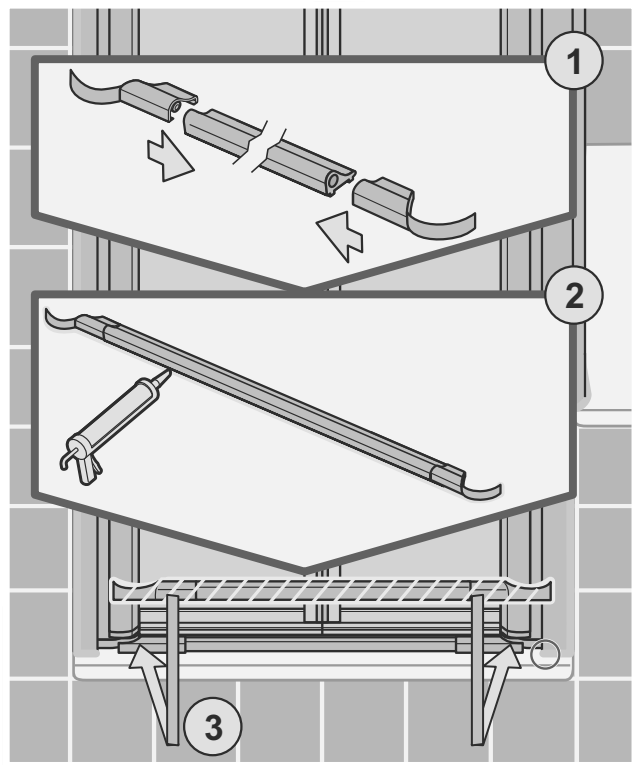


14

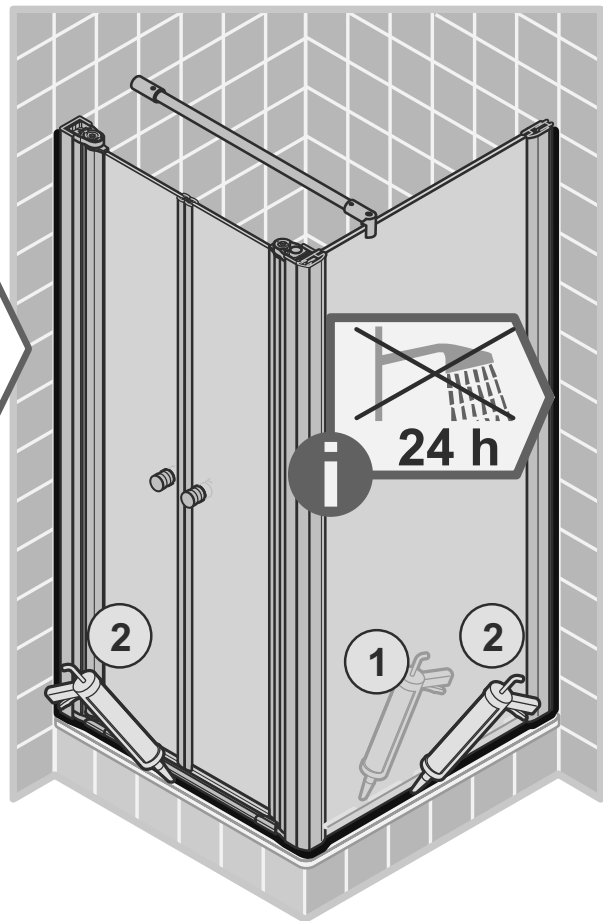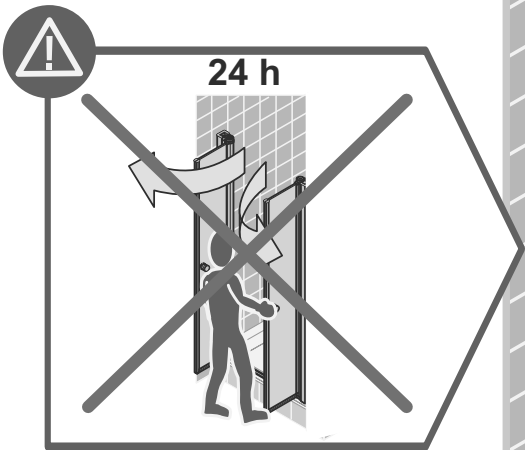



# PT 1631 + BSW 0606

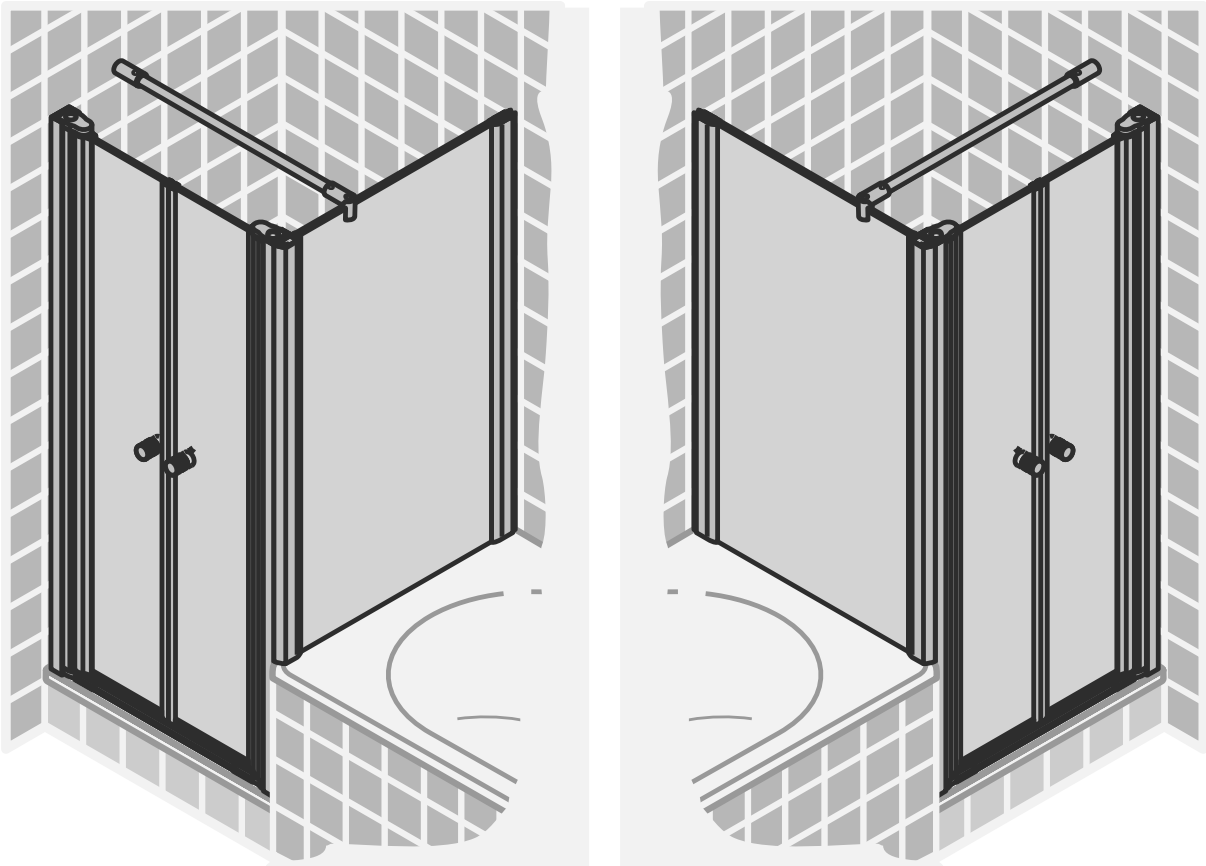


1

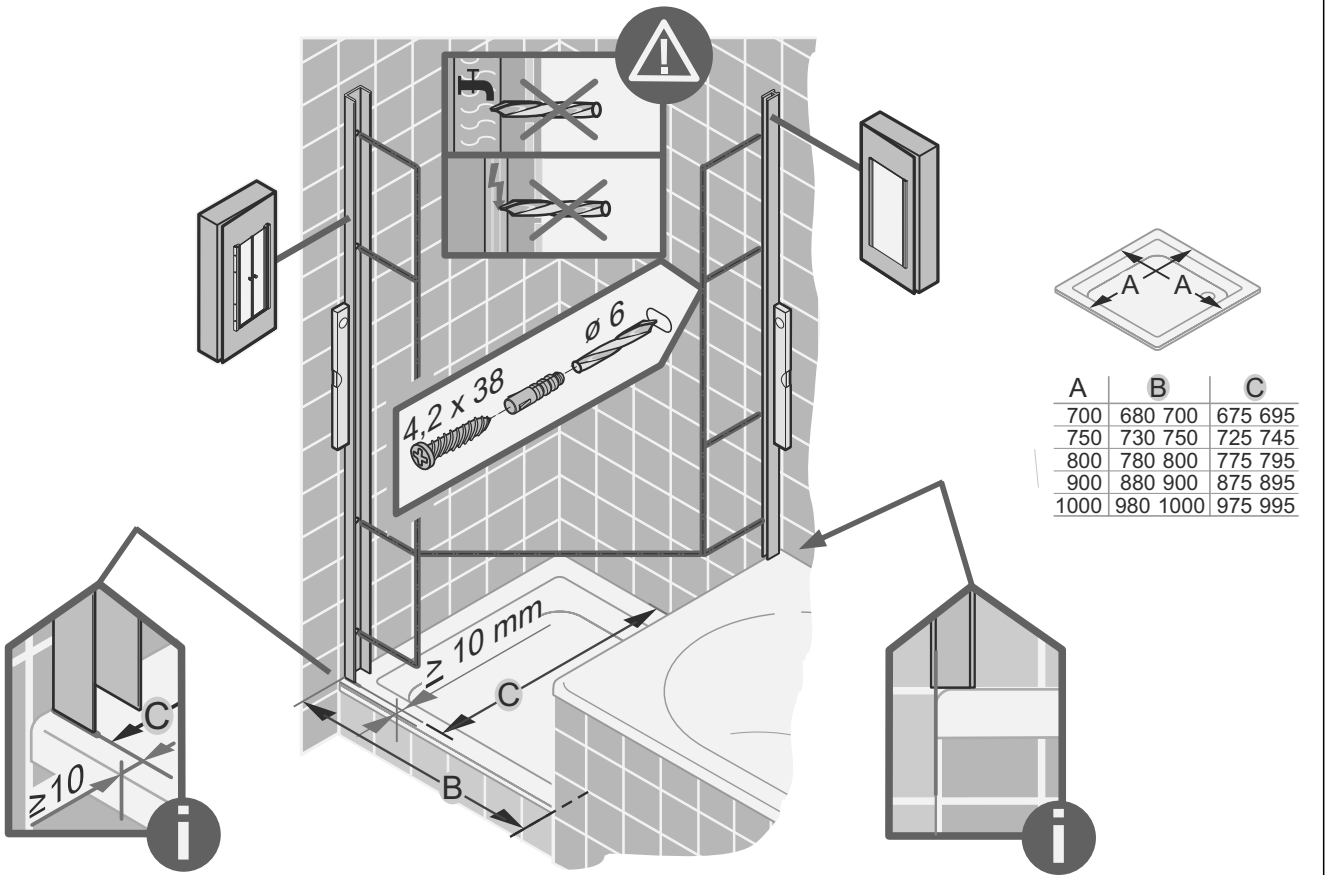


2

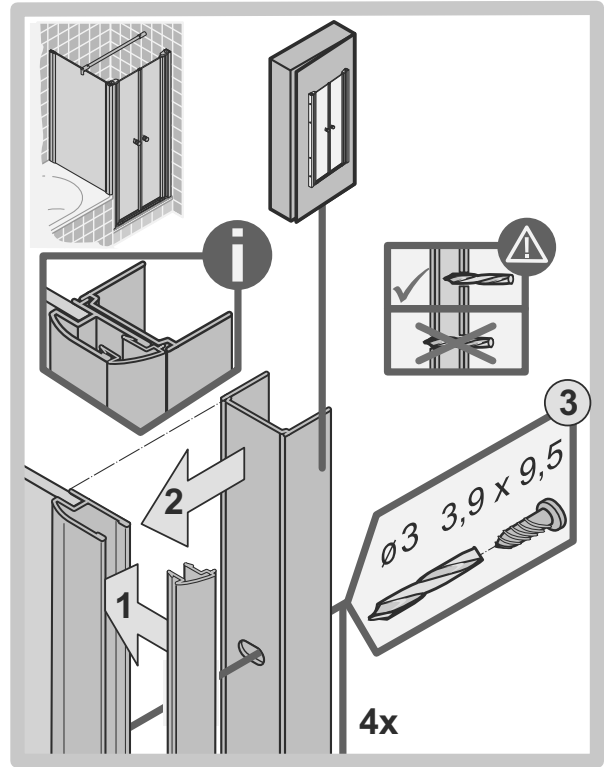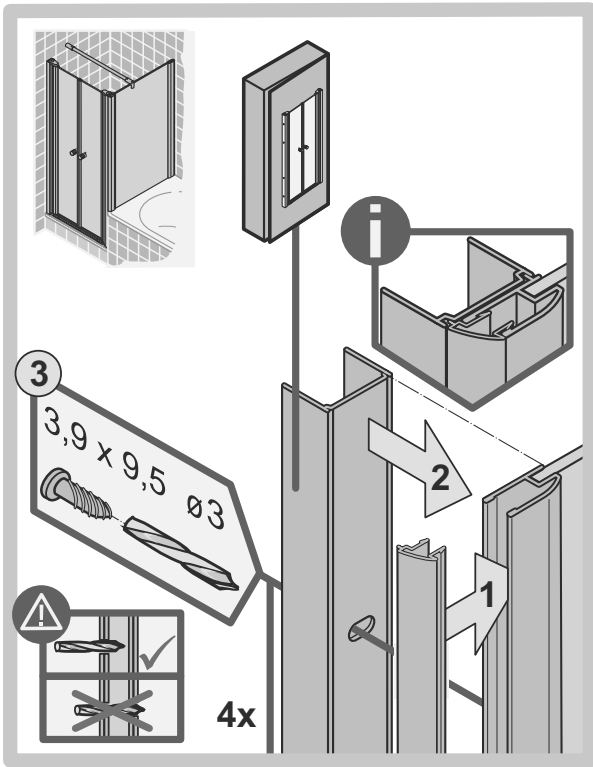








3

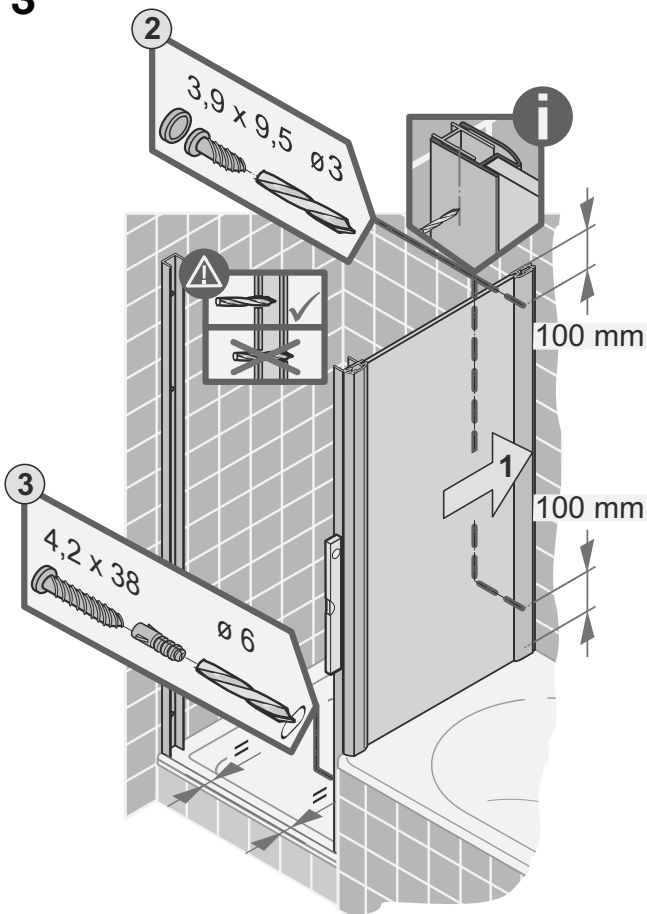


4

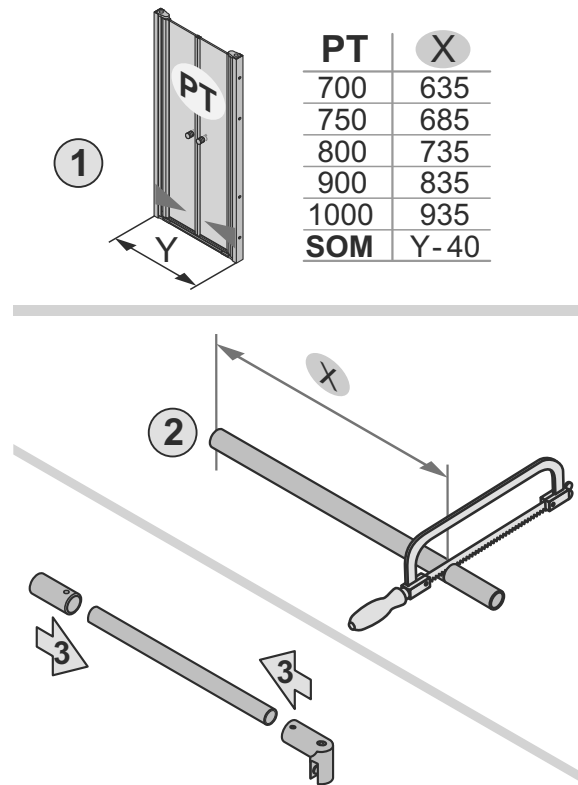


5

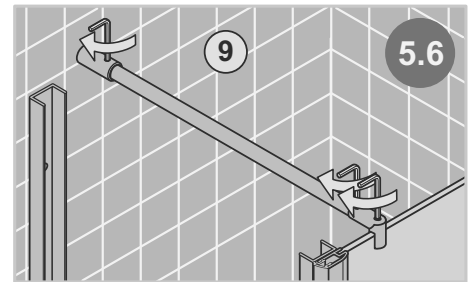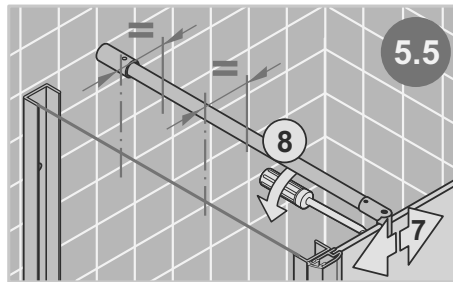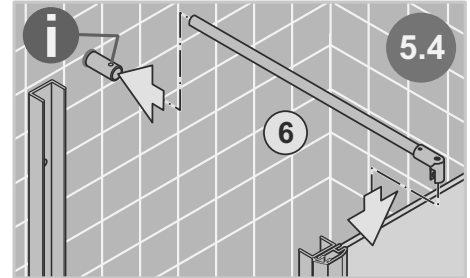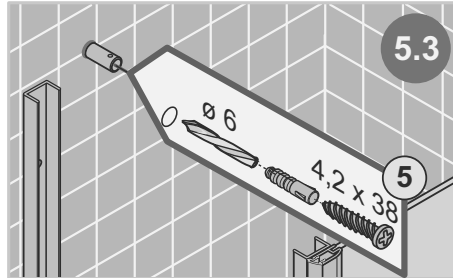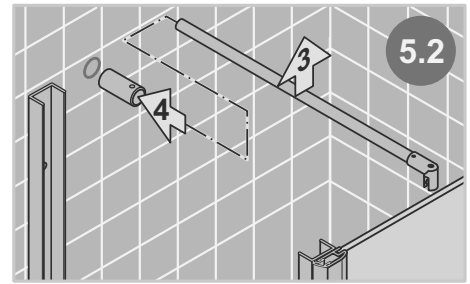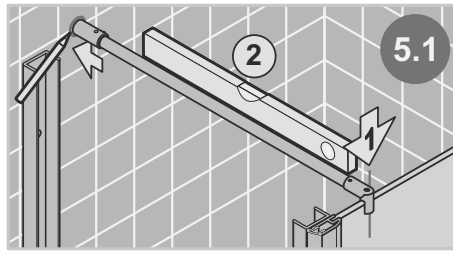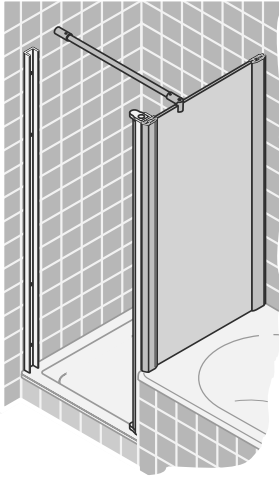


6

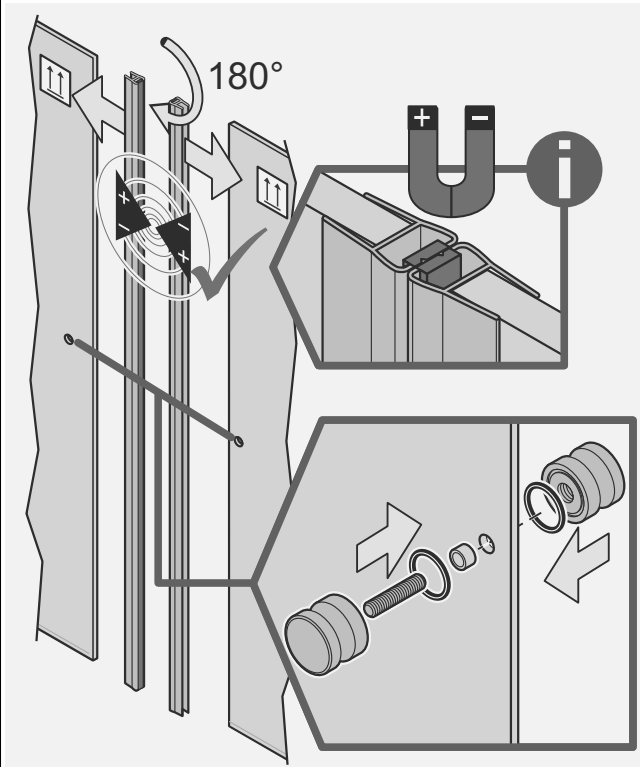


7

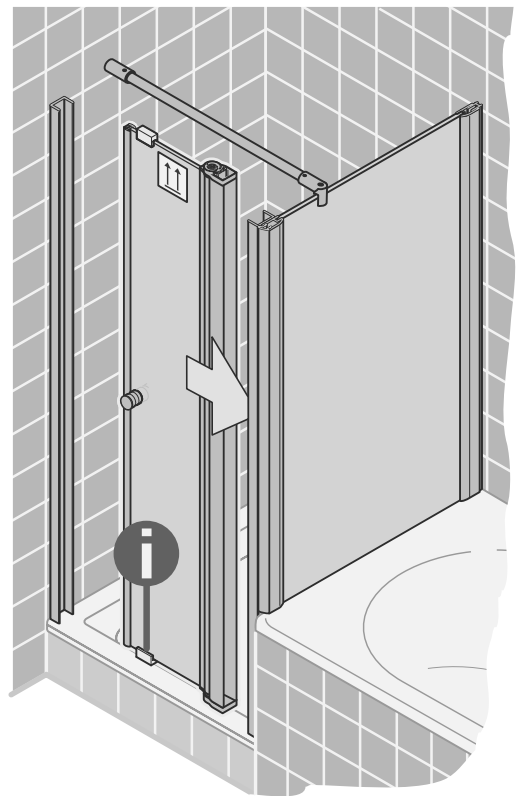


8

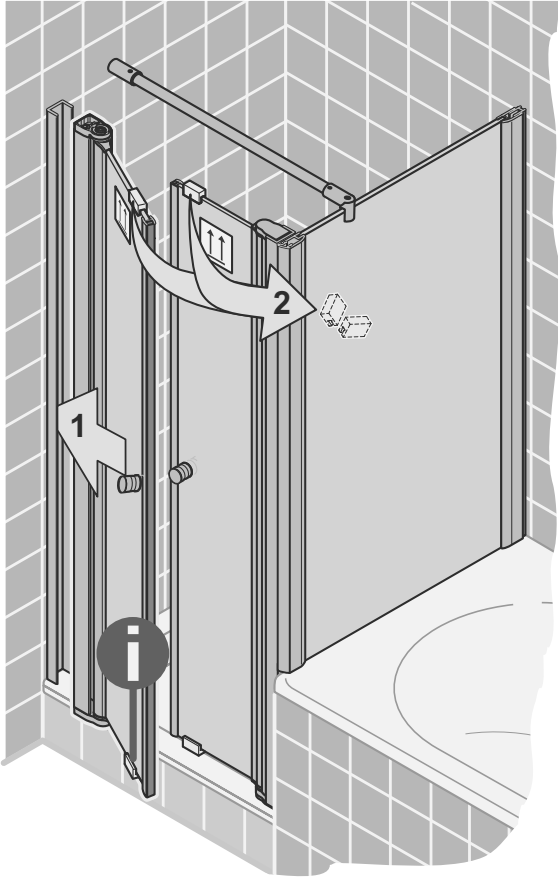


9

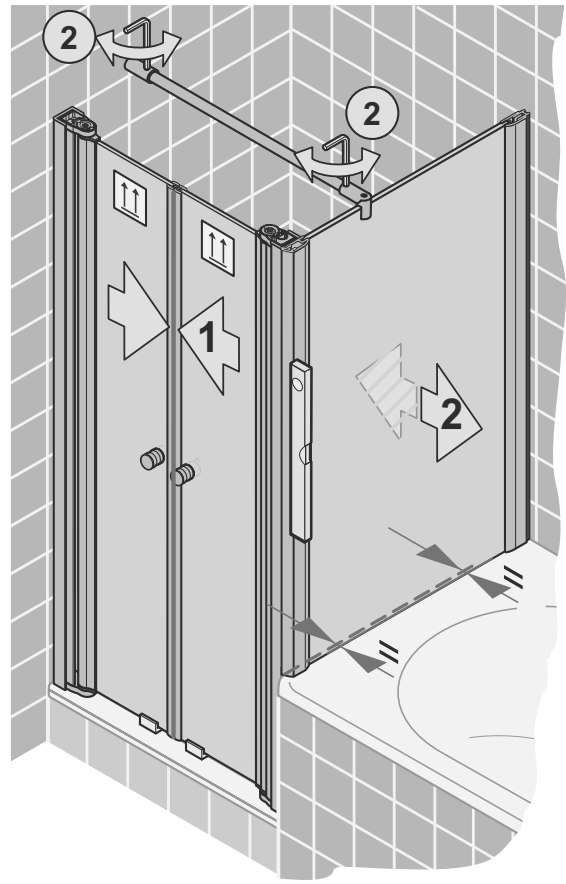


10

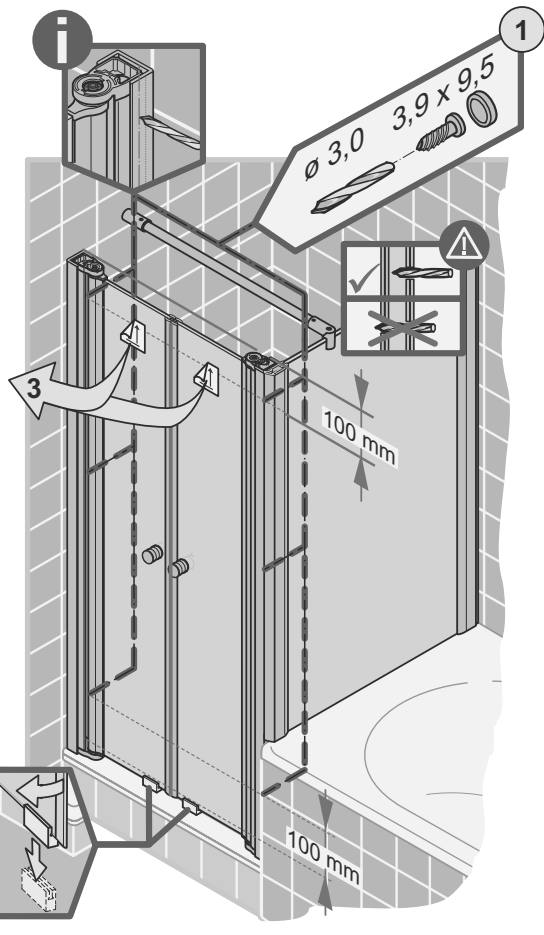


11

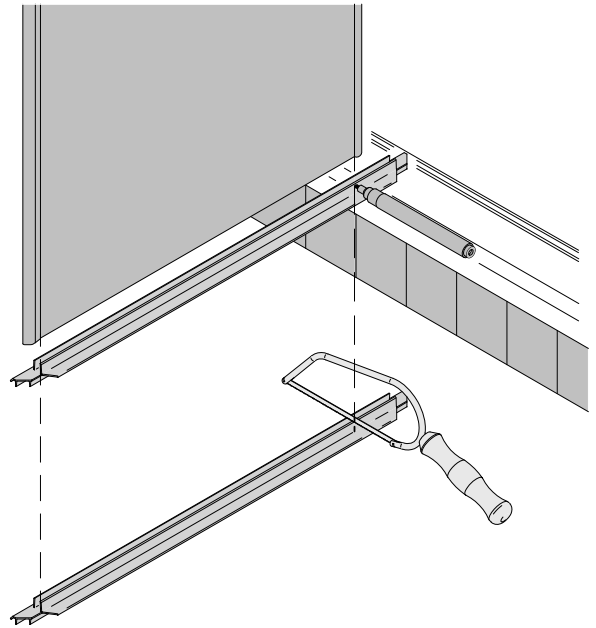

12

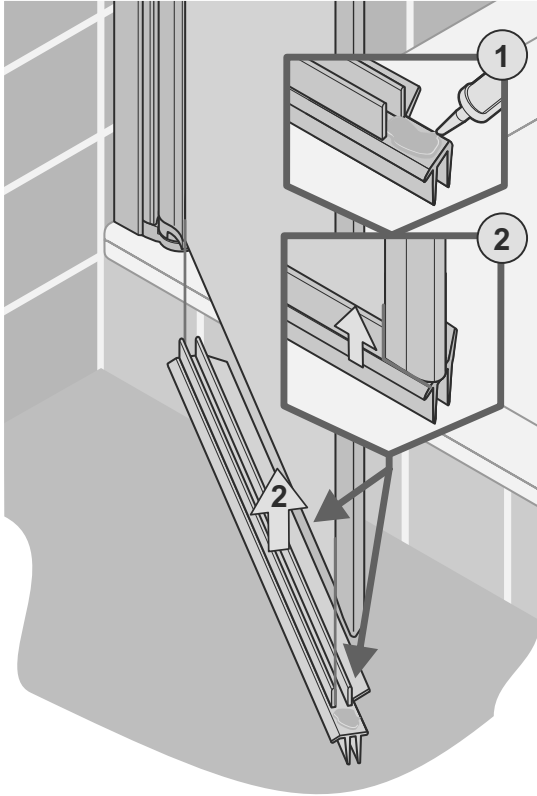

13

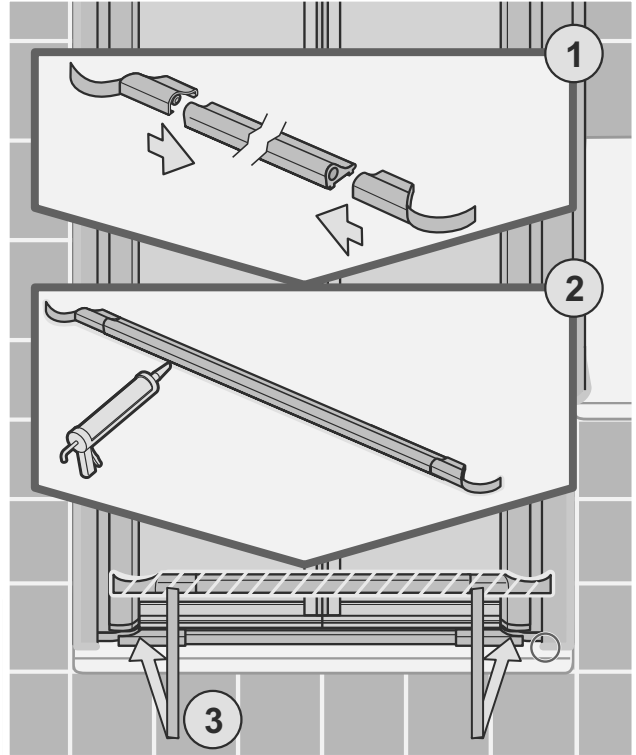

14

